

MKIA Instructions for Door with a Push Bar



Fixing Strip and Accordion must be notched.
Note: screw placement and reinforcement.

Installation Tips


Recommended Tools

- Rubber Mallet
- Sharp utility knife
- Craftsman E-Z cutters
- If pre-drilling is needed: 2 drills: one equipped with 3/32 bit



Fixing Strip Tips

- Fold Fixing strip and place WIDER side on the door.
- Alternate sides when securing to door and frame
- Fixing strip is not cut until AFTER it is screwed in. • Do not forget to remove the spacer on the door side.

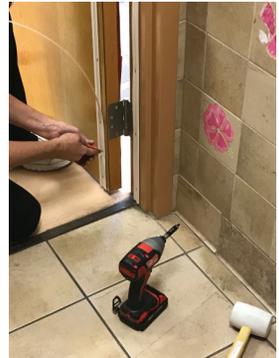

Accordion Tips

- Insert accordion on the frame side first.
- The "teeth" on the lip face down.
- Use the mallet to fully secure accordion top to bottom. 3 clicks.
- The fold line must line up to the fixing strip top to bottom.
- Double check accordion is 100% snapped.
- The accordion should fold flat against the frame.



Bend fixing strip and place in corner with wider section on the door side.





Cut notch.



Install fixing strip.




Notch accordion.

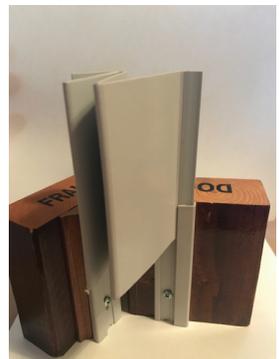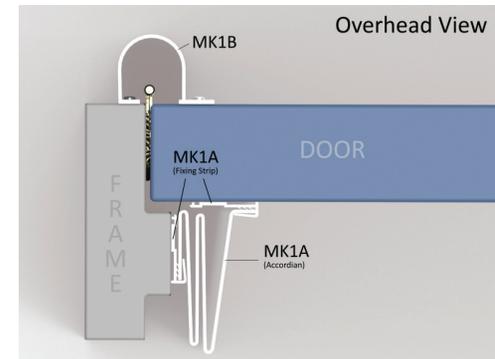

Installation Tips


Retaining Screws Tips

- Center the retaining screws through the fixing strip
- Do NOT put screws through the accordion
- Place one screw close to the top frame, one in middle, and one at bottom

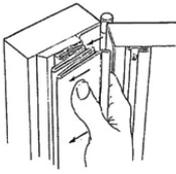


**The 1" Panel must be snapped into the frame Fixing strip FIRST.

**When snapping the Fingersafe panels push firmly top to bottom until fully snapped (3 Clicks).



**Screws are added centered on the fixing strip through accordion.

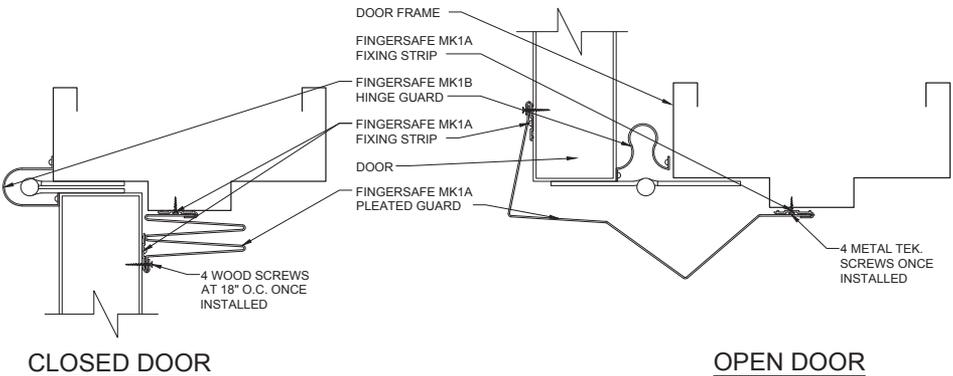

fingersafe[®] usa, inc.

www.FingersafeUSA.com
 888.FING-SAF (346-4723)
 2025 Louisville Rd., Unit H
 Savannah, GA 31415
 E-mail: Orders@Fingersafe.com